


Life²

Life² fixed-mount

Available for iPod Touch, iPad mini 4,
iPad 9.7" and iPad Pro 12.9"

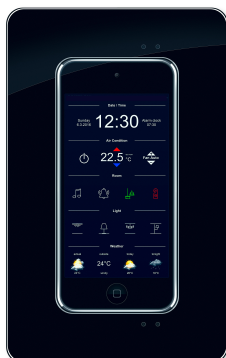

STEP 1

Removing the glass frame from the mounting box BEFORE mounting in the wall:

To loosen the glass frame including the plastic shell (for holding the iPad) from the white (gray) mounting box, **gently lift the frame at the two corners of a short side** (against the mounting box) so that it loosens from the magnet fixing of the mounting box.



Removing the glass frame from the mounting box AFTER mounting in the wall:

To loosen the glass frame incl. iPad from the mounting box mounted in the wall, carefully pull out the frame at the two corners of the upper short side (with the fingernails or a flat plastic spatula), so that it loosens from the magnetic fixation of the mounting box. Alternatively, the release of the magnetic fixation can be done with the red release magnets.






The mounting box is installed as a flush-mounted housing to accommodate the glass frame with integrated iPod / iPad in a hollow wall or brick / concrete wall.

The outer peripheral edge of the housing should be flush with the wall (or minimally below).

Depending on the desired display orientation, the mounting box can be installed in portrait or landscape format.

Before attaching the mounting box to the wall, make the connection for the power supply.

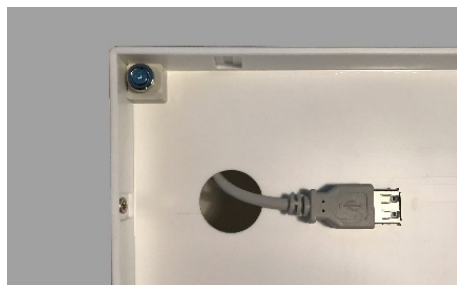

The power supply for the iPods / iPads is installed either via an externally mounted USB power supply with a USB cable (not included) into the mounting box or directly behind the mounting box in the supplied flush-mounted box power adapter (original Apple USB Power Adapter, not included).



When sufficient depth is available, the original power adapter (not included) can be fitted behind the mounting box.

Suitability will differ and should therefore be to the satisfaction of a qualified electrician.

The following steps are required:




Cut the opening in the rear wall of the mounting box and push out




Optional:

Mount the supplied flush-mounted box with 2 screws on the back of the mounting box. Sometimes. Open required openings for the cable feed of the mains cable in the flush-mounted box.

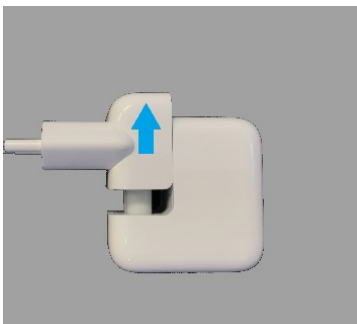


After fixing the mounting box in the wall (next section), the power cable (supply line in the flush-mounted box) is connected to the supplied connecting cable.

Remove the socket adapter from the Apple USB Power Adapter as shown.

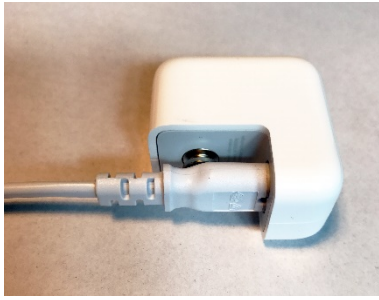

Connect the power cable and the USB Lightning cable to the mains adapter and stow the mains adapter in the flush-mounted box.

Cavity wall mounting

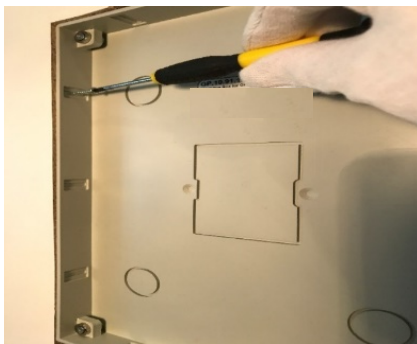


The attachment of the mounting box in the wall is done by screwing commercially available countersunk screws through the appropriate lateral slots.


NOTE: For very thin plate thicknesses if necessary. Install additional panel reinforcements or mounting strips behind the wall panel around the cutout prior to installation.

This type of mounting is also suitable for installation in wooden doors or wall paneling.

Brick / concrete wall mounting

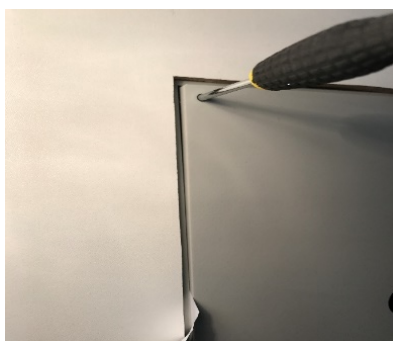

During assembly, the opening is closed with a lid to prevent the ingress of plaster / colour materials. Clean the mounting box properly and ensure that it is flush and flush with the wall. Inaccuracies during installation can be adjusted later by the individual tolerance compensation. Remove the cover after plastering.

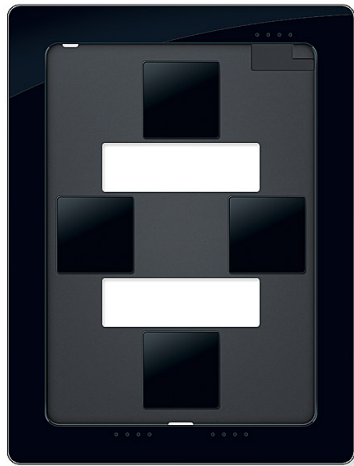


The glass frame is used for permanent install of the iPod / iPad.

The ultra-thin glass frame is flush with the iPod / iPad display surface.

Insert iPod / iPad in the glass frame



Remove the protective film

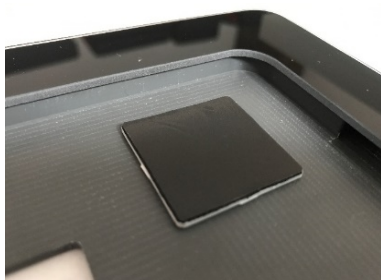

In the variant for iPad 9.7 inch, depending on the model, the spacers supplied are attached to the adhesive surface
Remove the protective film on the spacer plate




Please pay attention to a fat and dust-free back of the iPod / iPad before inserting

Then insert the iPod / iPad in the frame and press gently on the adhesive / contact points



Insert the angle adapter through the opening and connect it to the iPod / iPad

Insert glass frame into the assembly

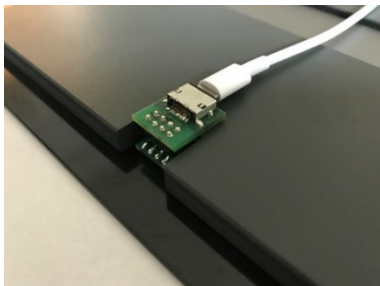

Plug in the original Apple Lightning cable

Now insert the glass frame with iPad / iPod in the mounting box

The fixation is done by the invisible magnetic smart lock

If iPad removal is required (magnetic smart lock)




Carefully and slowly place the two release magnets on the upper corners of the glass frame and move them slightly, releasing the holding magnets in the glass frame (clicking sound).



By loosening the magnets, the magnetic adhesive force of the glass frame in the mounting box is significantly reduced and the glass frame can thus be tilted out of the mounting box without force. Disconnect the Lightning cable from the angled adapter.

Remove iPod / iPad from the glass frame

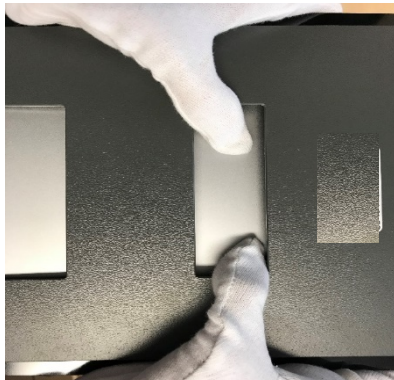

From the back of the glass frame, gently and slowly push the iPod / iPad forward through the plastic tray openings.